

SEGMENTED ROLLER INSTALLATION INSTRUCTIONS

Part No. BBF-106347 Rev. *

1. Power off printer/remove power cord.
2. Press in on side latches at the side of the printer to release the cover. Slide the rear cover back to open.
3. Release access window by pulling and rotating forward. Pull the front access/window assembly forward to remove it from the printer.
4. Rotate clear paper guide up and remove from upper roller.
5. Remove (1) #6 screw and retainer from right endplate.
6. Remove spring and retainer from upper roller, left and right side.
7. Rotate roller up through channel in the endplates and remove roller.
8. Place bearings on segmented roller supplied in kit.
9. Place segmented roller in the left endplate. Slide the right end of roller through the slot in the right endplate and move segmented roller through channel into normal position.
10. Place springs supplied in kit on each side of segmented roller, then place an e-ring on each end of bearing to retain springs.
11. Snap clear paper guide on segmented roller assembly.
12. Slide window assembly back in place in reverse order.
13. Close rear access cover.

