

7350 Procedures:

Note: For any procedure on the 7350, if you are required to reset the printer, you can either recycle power or, hold the ALT key while pressing RESET. Either way will reset the printer.

To print the FEATURE STATUS for all users:

Load a blank (8.5 x 11 minimum) sheet in the front, or load continuous forms in the rear tractors (set forms select switch to correct location - front or rear)

1. Hold ALT and press MENU.
2. Press SPEED once you should see 53 MENU LISTING in the display.
3. Press RLF twice. The display should read PRINT ALL
4. Press enter, an * should appear and the printer will begin printing the feature listing.
5. Feed paper as necessary until done (about 5 pages)
6. Compare feature settings with those of known working printers.
7. Change features to match working unit.

To print HEX DUMP:

1. Load paper (either front or rear)
2. Do ALT //RESET then quickly press and hold SPEED until HEX MODE is displayed.
3. Send job to printer.
4. Feed paper as necessary. (front feed may require a lot of feeding, so use rear feed greenbar if possible)

To check feed roller tension setting:

1. Load front or rear forms
 2. Do ALT / RESET
 3. Quickly press and hold ONLINE until printer comes ready
 4. Do ALT / MENU
 5. Press TEAR OFF 4 times - Display reads: MANUAL FRONT ADJ
 6. Press RLF - display should read 500
 7. Press TEAR OFF twice - reads MANUAL REAR ADJ
 7. Press RLF - display should read 250
- (if settings are wrong, then press up or down arrows to correct setting, then press ALT, (don't hold it) and then press MENU. This will save it.