

# Documax Error Codes

Listed below are the post error codes Documax will display in the event of a system level problem. The error numbers are displayed in the following format:

<b>ERROR NUMBER</b>	<b>DESCRIPTION</b>	<b>LCD DISPLAY MESSAGE</b>
4000	Rom Checksum error	Err: 4000 CHKSUM
4011	Ram test walking zero error	Err: 4011 RAM1
4012	Ram test walking one error	Err: 4012 RAM2
4013	Ram test zero write error	Err: 4013 RAM3
4014	Ram test one write error	Err:4014 RAM4
4015	Ram map error	Err:4015 RAM MAP
4016	Indicates general failure. Document code. Cycle power; if error reoccurs, unit repair is required.	Err:4016 VRTX
4018		Err:4018 TASK
4019		Err:4019 FAIL
4020		Error: 4020
4021		Error: 4021
4022		Error: 4022
4100		Error: 4100
4110		Error: 4110
4120		Error: 4120
4130		Error: 4130
4140 XXX		Error: 4140 XXX