

Downtime Keyboard Instructions



Fastmark M1 with USB host port:

Press CTRL + DEL buttons simultaneously, Wait for LED to change color, then press F2 to see downtime prompts. (Do not use the DEL key on the numeric pad). You can Not have the regular USB cable attached at The same time as the keyboard USB cable



Fastmark M5 with the M Series Keyboard:

Press the ALT+ E buttons Simultaneously, then press the FORM Button. Use the Arrow keys to scroll Through the list of downtime programs, Press ENTER to select desired program.



Fastmark 4600 with PS/2 keyboard:

Press the CANCEL button on the printer's control panel.



Fastmark M7+ with PS/2 port:

Press CTRL+ DEL buttons simultaneously, Wait for LCD to change, then press F2 to See downtime prompts. (Do not use the DEL key on the numeric pad).

To disable downtime mode, cycle the power on the printer

To disable downtime mode, cycle the power on the printer

To disable the downtime mode, press the PAUSE Button.

To disable downtime mode, cycle the power on the printer