

Printer driver complete removal in Win 7 before a fresh install

To remove driver –

1. In Devices and Printers, right click on Printer icon (if one exists) and delete it.
2. Next open Control Panel
3. Click on System and Security
4. Click Administrative Tools
5. open Print Management
6. Open your print server from the tree
7. Find the driver and right click
8. choose Remove Driver Package

(alternate way to open Print management- Click start button and type printmanagement.msc in search box)

After it's fully removed, do a fresh install.

AMT Datasouth Corp.

Corporate Headquarters
803 Camarillo Springs Road
Suite D
Camarillo, CA 93012
(805) 388-5799 PH
(805) 484-5282 FX

Charlotte Operation
5033 Sirona Drive
Ste 800
Charlotte, NC 28273
(704) 523-8500 PH
(704) 525 6104 FX

www.amtdatasouth.com