

VOLTAGE AND FUSE SELECTION

Part No. BBF-103884 Rev. C

WARNING


Before beginning the procedure below, make certain the printer is disconnected from the AC power source.

CAUTION

The printer must have the correct line fuse installed for the selected input voltage.


<u>Input Voltage</u>	<u>Fuse Rating</u>
115 Volts	7 amps
230 Volts	4 amps

1. Remove the top cover of the printer.
2. The power selector switch is located by viewing the top of the cooling duct. Set the power selector switch to the desired setting.

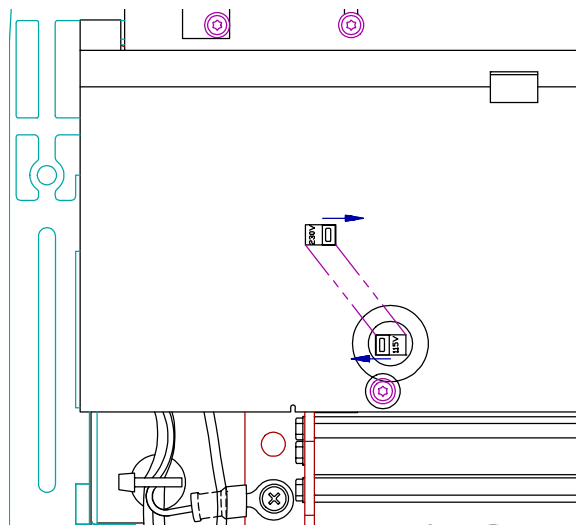

Top view of printer

- Use standard bit screwdriver to turn the fuse carrier counterclockwise 1/4 turn. Remove the fuse carrier and fuse and discard.

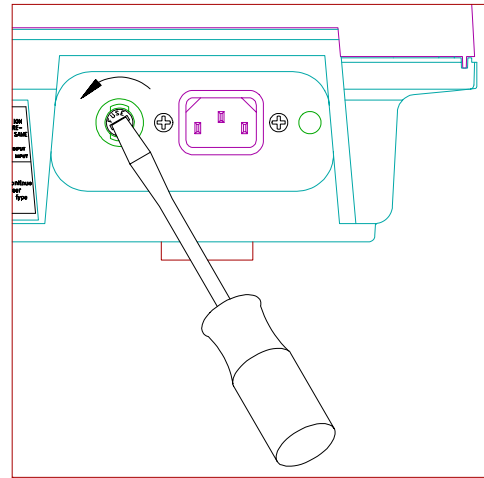

- Make certain the fuse and fuse carrier supplied in kit are correct for the voltage you have selected.

<u>Power Selector Switch Setting</u>	<u>Color of the Fuse Carrier</u>	<u>Fuse Rating</u>
115 volts	gray	7 amps
230 volts	black	4 amps

- Install the fuse and fuse carrier supplied in kit.
- Replace top cover.