

VOLTAGE AND FUSE SELECTION


Part No. BBF-104599 Rev. *

WARNING: Before beginning the procedure below, make certain the printer is disconnected from the AC power source.

CAUTION: The printer must have the correct line fuse installed for the selected input voltage.

<u>Input Voltage</u>	<u>Fuse Rating</u>
115 Volts	1.5 amps
230 Volts	0.8 amps

1. The power selector switch is located on the back of the printer as shown. Set the power selector switch to the desired setting.
2. Use standard bit screwdriver to turn the fuse carrier counterclockwise 1/4 turn. Remove the fuse carrier and fuse presently in the printer.

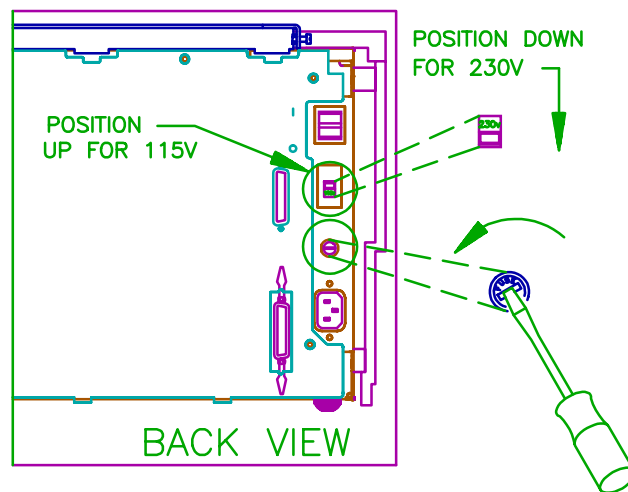

3. Make certain the fuse and fuse carrier supplied in this kit are correct for the voltage you have selected.

<u>Power Selector Switch Setting</u>	<u>Color of the Fuse Carrier</u>	<u>Fuse Rating</u>
115 volts	gray	1.5 amps
230 volts	black	0.8 amps

4. Install the fuse and fuse carrier supplied in this kit.