

DOCUMAX PRINTER PRINTHEAD REMOVAL INSTRUCTIONS

BBF-104868 REV. *

Printhead Removal

1. Remove access cover.
2. Remove the ribbon guide from the printhead and lift the ribbon cartridge assembly from the printer.
3. Remove screws (2) and flat washers securing keypad support assembly.
4. Rotate keypad support assembly toward right side of printer and rest on table top. Be careful to not put tension on the cables.
5. Remove the printhead cable retainer by removing (2) screws.
6. Unplug printhead cable assembly from the printhead assembly.
7. Remove the (2) screws securing the print head and lift printhead assembly out of carriage.
8. Replace in reverse order.

