

TWINAX CABLE CONNECTION

Part No. BBF-105755 Rev. *

If your unit utilizes the twinaxial cable connector shown below, use this procedure to connect twinax cables from the host computer to the printer. Otherwise, refer to Chapter 3 (INTERFACING) of the operators manual for connecting cables.

This interface features a Twinax interface which is accessed through the twinaxial connector located on the rear of the printer. This interface allows the printer to be used as a direct replacement for the IBM 5224, 5225, 5256, and 4214 printers.

Prior to connecting cables, the user should first set Feature Number 17 (Device Address) and Feature Number 18 (Device ID).

To install cables:

1. Attach the source cable from the system, remote terminal or preceding device to the twinax connector marked IN. See figure below. Make certain the widest slot in the source cable is aligned with the key in the connector.
2. If the printer is the last device on the cable, set the cable through/terminate switch to TERM. If another device is to be cabled through the printer, set the cable through/terminate switch to CABLE THRU.
3. Attach the cable for the next device (if any), to the twinax connector marked OUT.

